



# Temperaturmanagement

## Wiring Diagram E5CC / LSTW / Cooling Unit or Peltier module (24VDC)

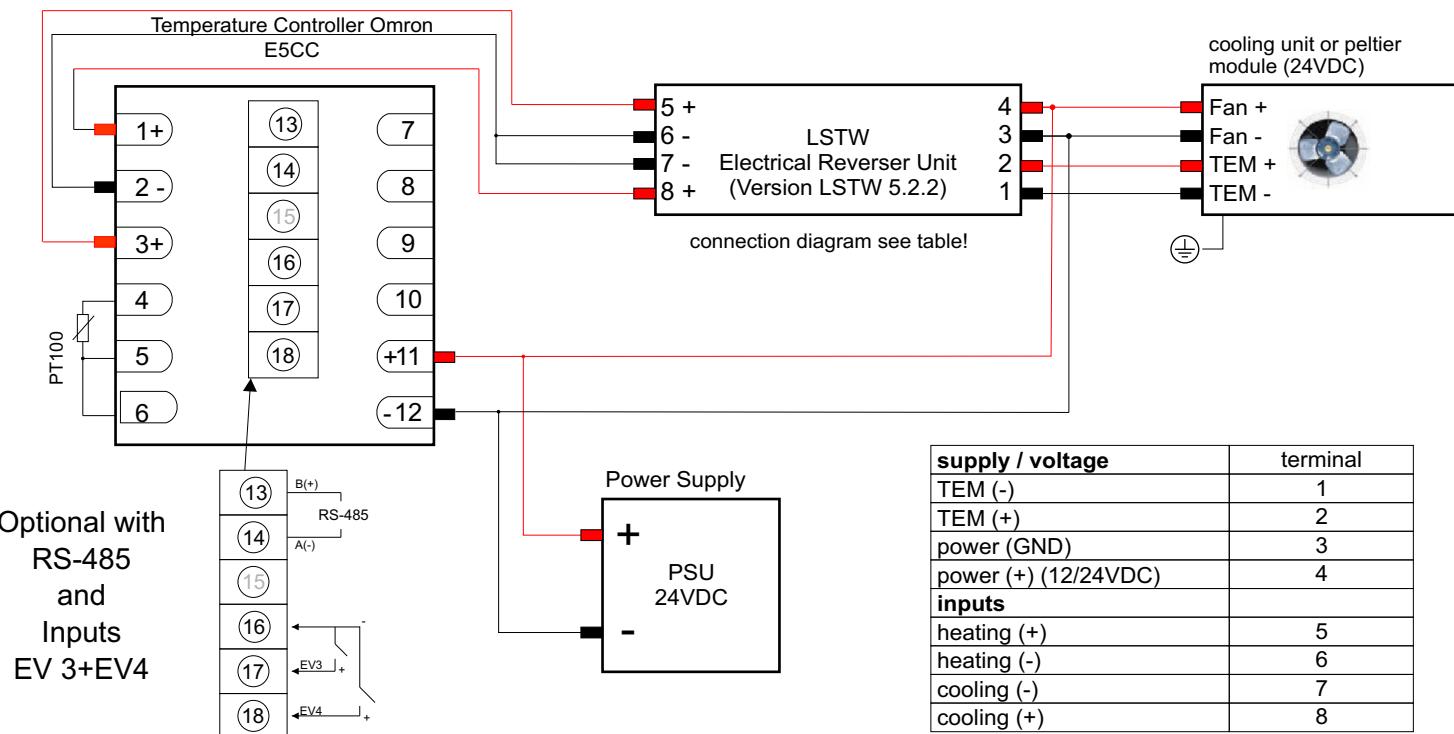

Please note the information on page 2!


## Wiring Diagram E5CC / LSTW / Cooling Unit or Peltier module (12VDC)

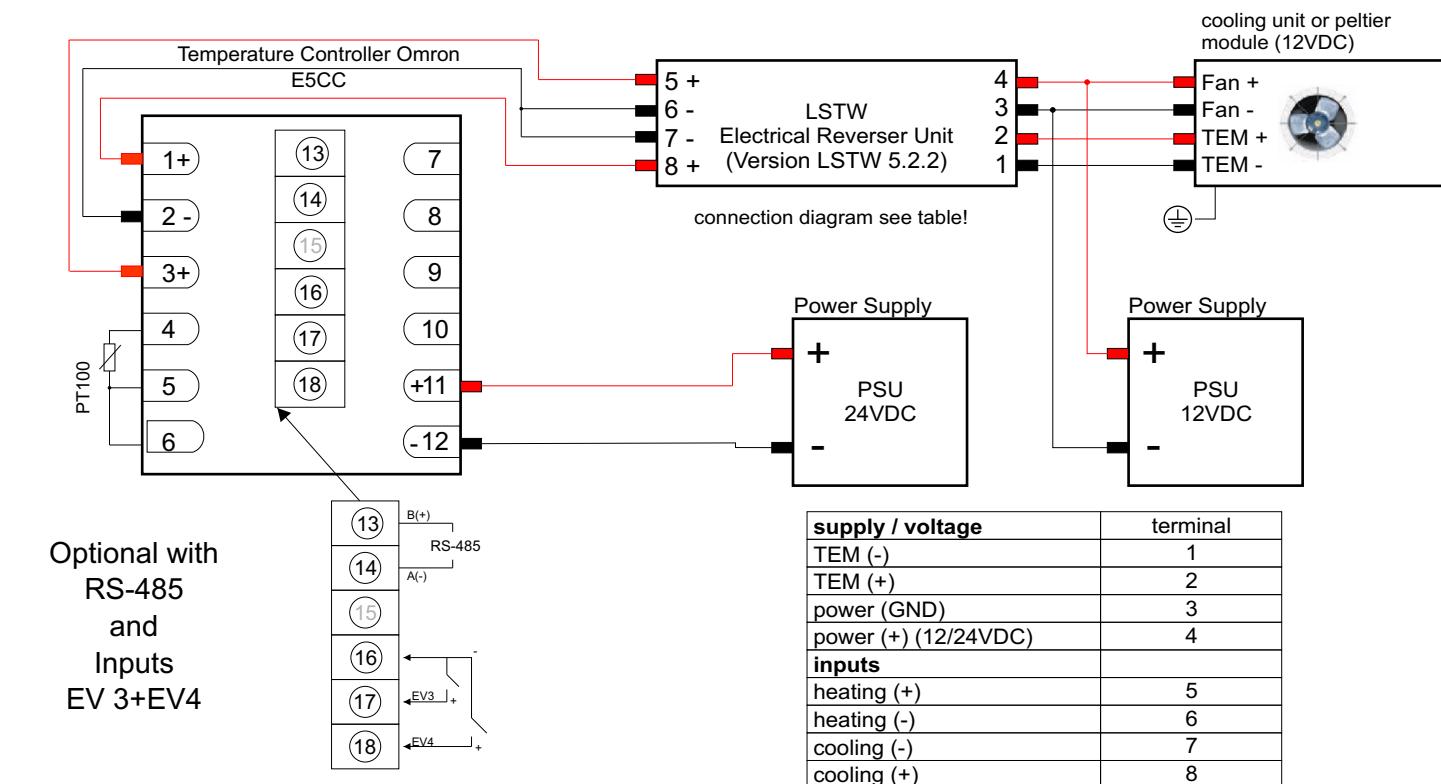

# Temperaturmanagement

## Wiring Diagram E5CC / LSTW / Cooling Unit or Peltier module (12/24VDC)

Please note that heating and cooling operation must be set from Standard to Heating/Cooling and Direct/Reverse operation must be set from Reverse operation to Direct operation.  
(See blue framed settings)

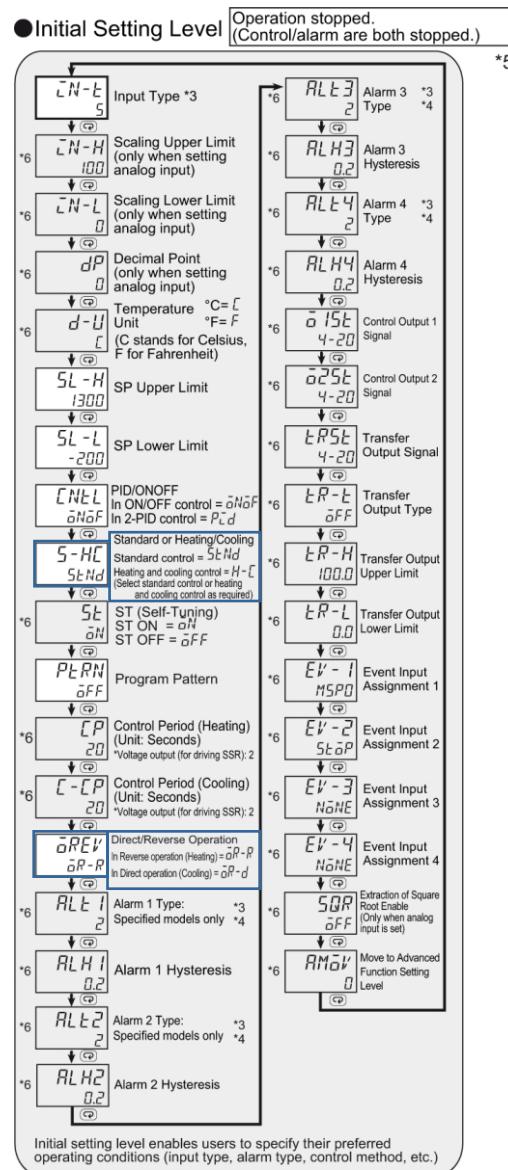

\*3: Refer to the adjoining tables for details of input types and alarm types.

\*4: Applicable only to models with alarm functions.

\*5: Operation is stopped when moved to the initial setting level.  
(control/alarm are both stopped.)

\*6: The grayed-out setting items are not displayed for some models and some settings of other setting items.

\*7: Applicable only to models with heater burnout functions.

\*8: The four numeric digits of the product code are displayed in the No. 2 display. The setting cannot be changed and there is nothing that you need to set.